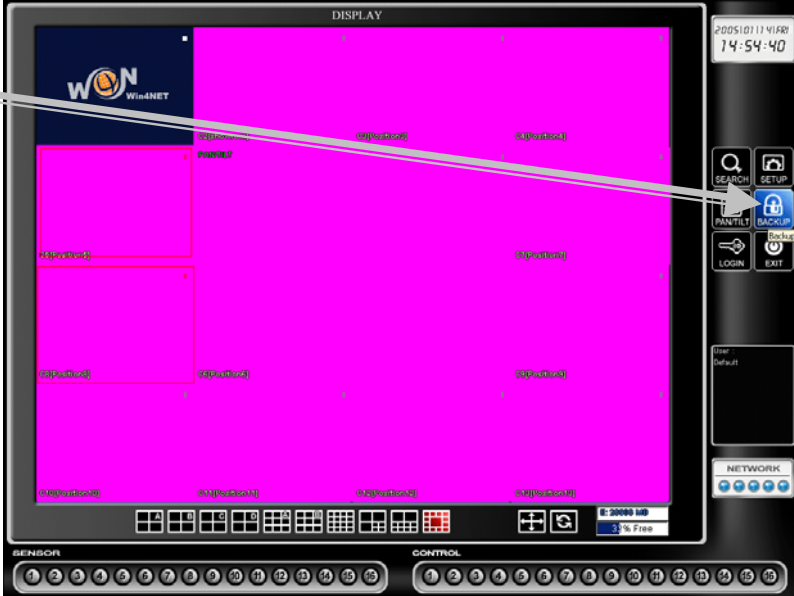
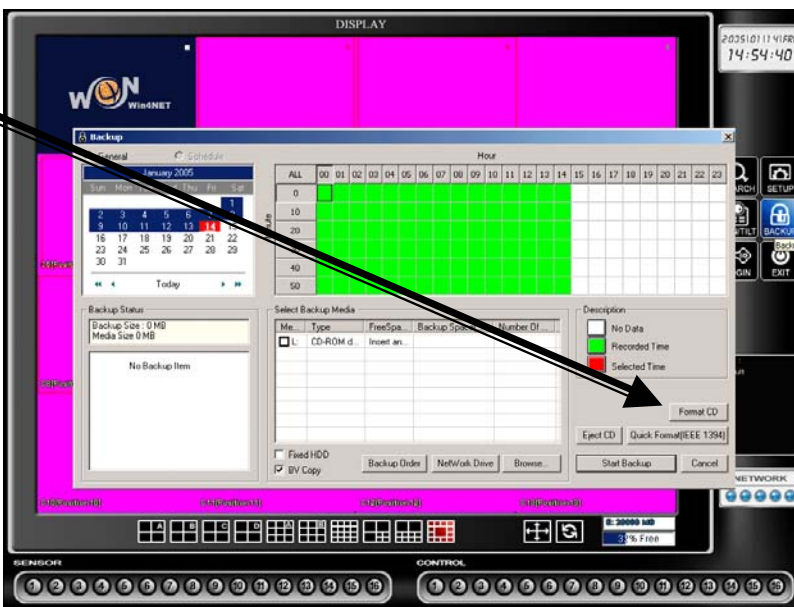


DVR-1016/3016 CDR/RW Backup instruction

17-Jan-2005

Please follow the process to backup recorded images onto a CDR/RW Disk.
There is no need to install any additional software on the DVR.

For more information please call your local dealer or VIDEOMAN support Hotline on 1300 799 507.

Step	Description	On Display
1	<p style="text-align: center;">Click Back Up</p>	 <p>The screenshot shows the main menu of the DVR interface. The 'BACKUP' button is highlighted with a red rectangular box. A black arrow points from the 'Click Back Up' text in the description to this button. The interface includes a 'WON Win4NET' logo, a date and time display (2005/01/11 14:54:40), and various control buttons like SEARCH, SETUP, PAN/TILT, BACKUP, LOGIN, and EXIT. A 'NETWORK' status bar is visible at the bottom right.</p>
2	<p style="text-align: center;">Click FORMAT CD</p>	 <p>The screenshot shows the 'Backup' dialog box open over the main menu. The 'Format CD' button is highlighted with a black arrow. The dialog box contains a calendar for January 2005, a 'Backup Status' section showing 'Backup Size: 0 MB' and 'Media Size: 0 MB', and a 'Select Backup Media' section with a table for choosing media. The 'Description' section has radio buttons for 'No Data', 'Recorded Time', and 'Selected Time'. At the bottom, there are buttons for 'Format CD', 'Eject CD', 'Quick Format [EE 1294]', and 'Start Backup'.</p>

3

Insert an unformatted blank CDR/CDRW disk into the Drive and wait for the colour of "Format CD" button changes to Blue. (Appx 20Sec)

Then
Click
FORMAT
CD



4


Click
START FROMAT
(Input a label
for your
reference)



5

Select date & time for backup and Start Backup



Click CD-ROM Drive

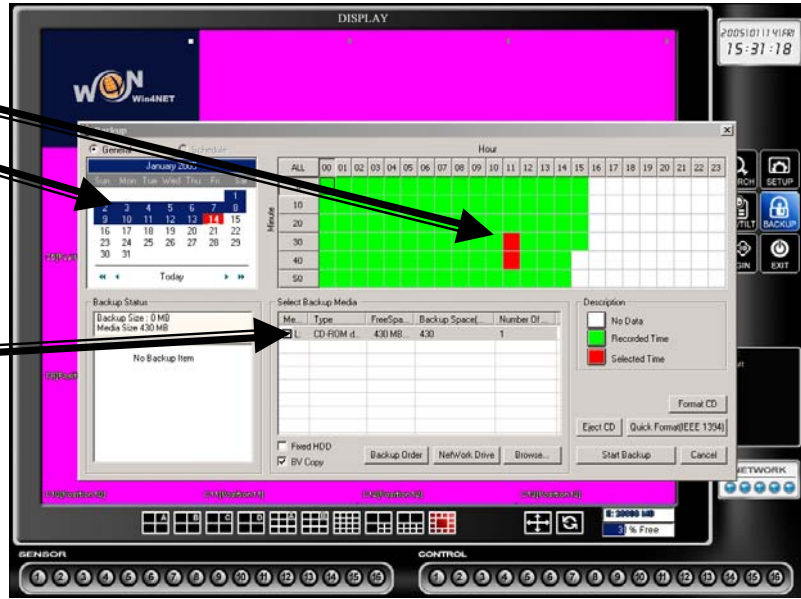

7


Click START BACKUP

Click START BACKUP

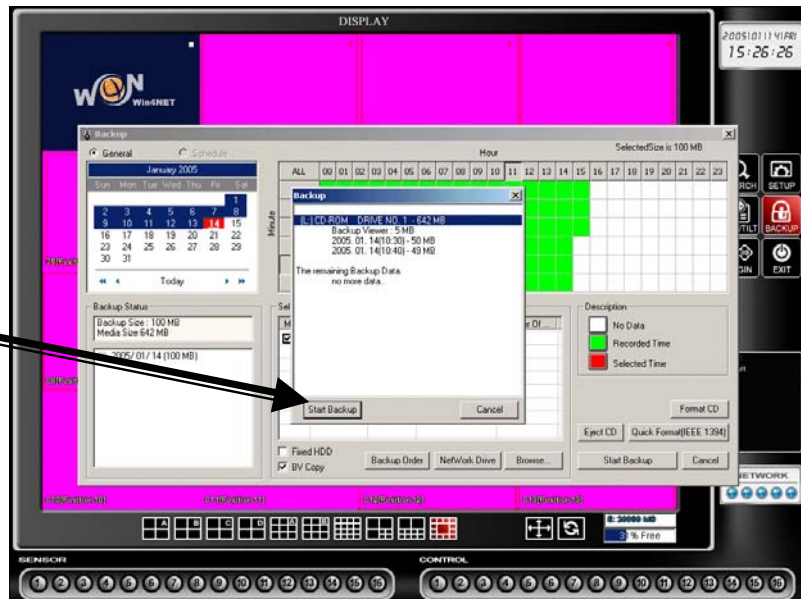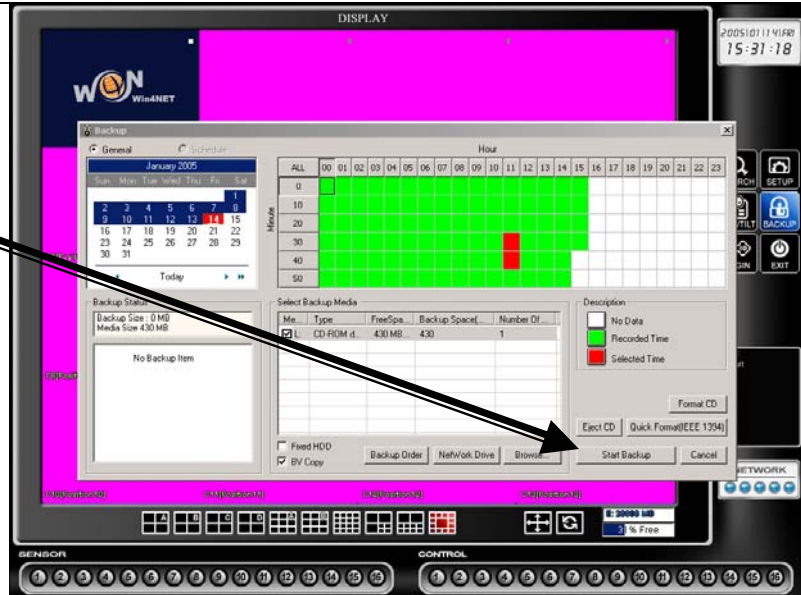


8

Waiting for Backup

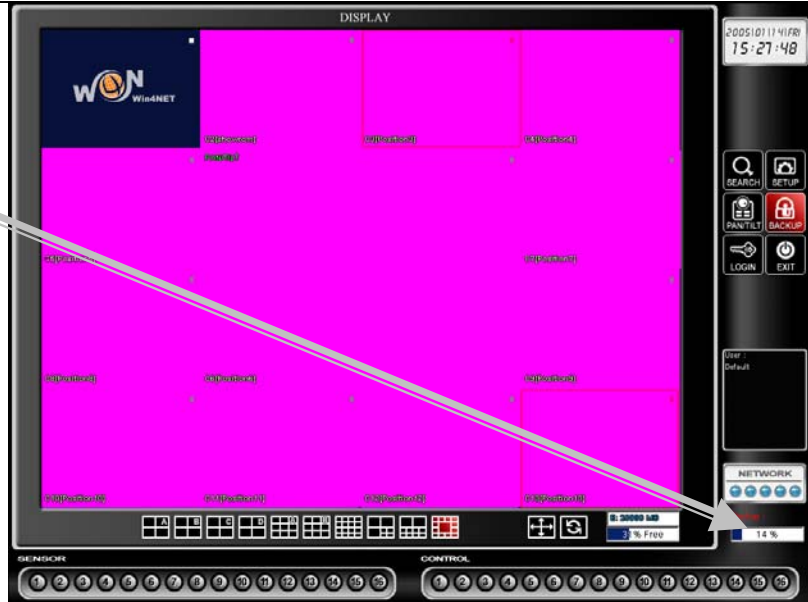

9

Click EJECT CD

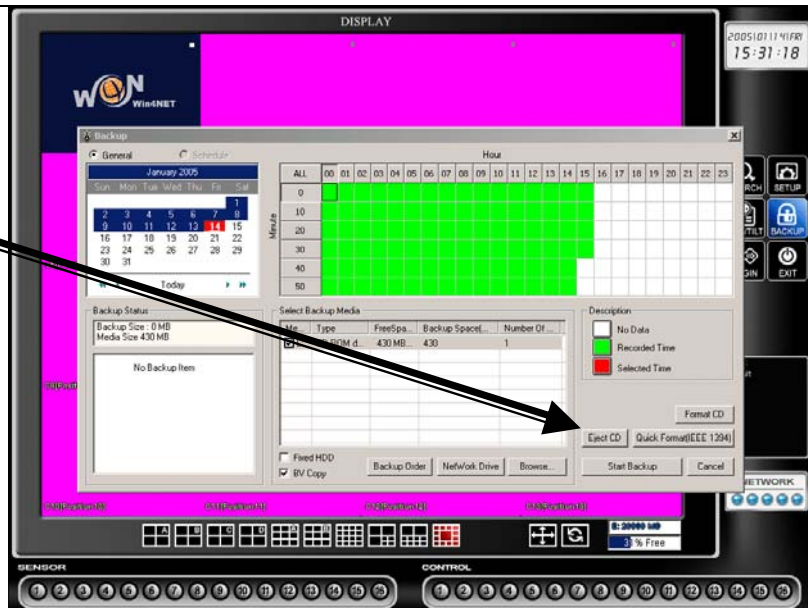

10

Select the 3rd option then Click OK




End of Format Process

Playback the footage from BackupCD on the other PC

Insert Backup CD into CD Drive then the software will start automatically

1

1. Click 16 CAMERA VIEW
2. Click BACKUP SEARCH
3. Click BACKUP MEDIA
4. Click Time & Date
5. Then Click PLAY BACK BUTTON

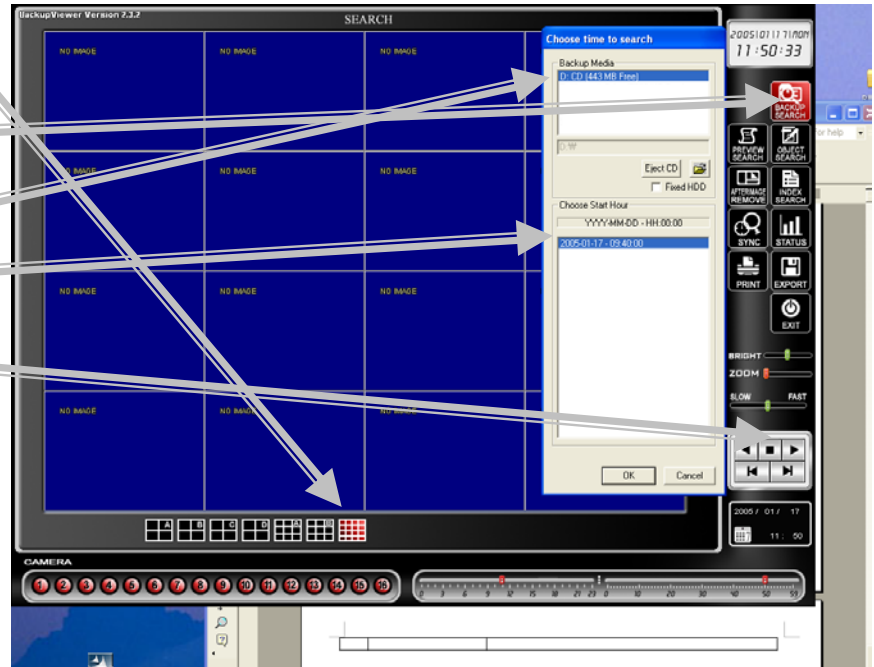

2

